


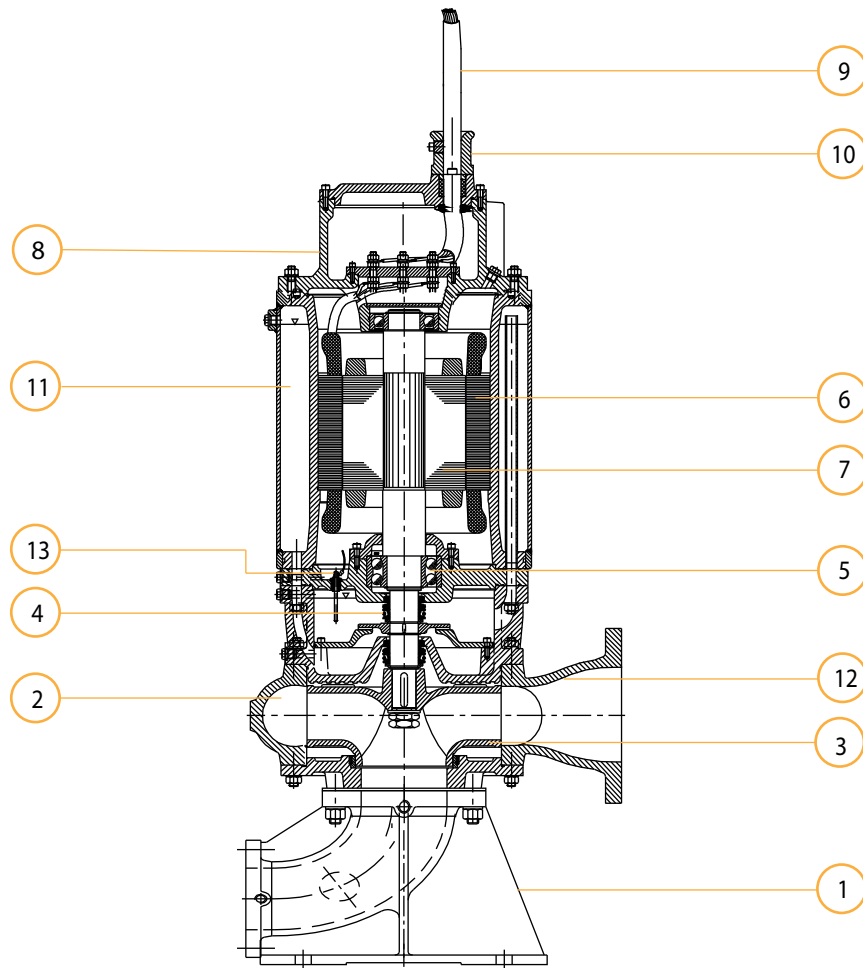

SECTIONAL VIEW




Part List

Pump Support Foot	1
Volute	2
Impeller	3
Mechanical Seal	4
Bearing	5
Stator	6
Rotor	7
Top cover	8
Cable	9
Cable Socket	10
Cooling Jacket	11
Service Hole	12
Sensor	13



SECTIONAL VIEW

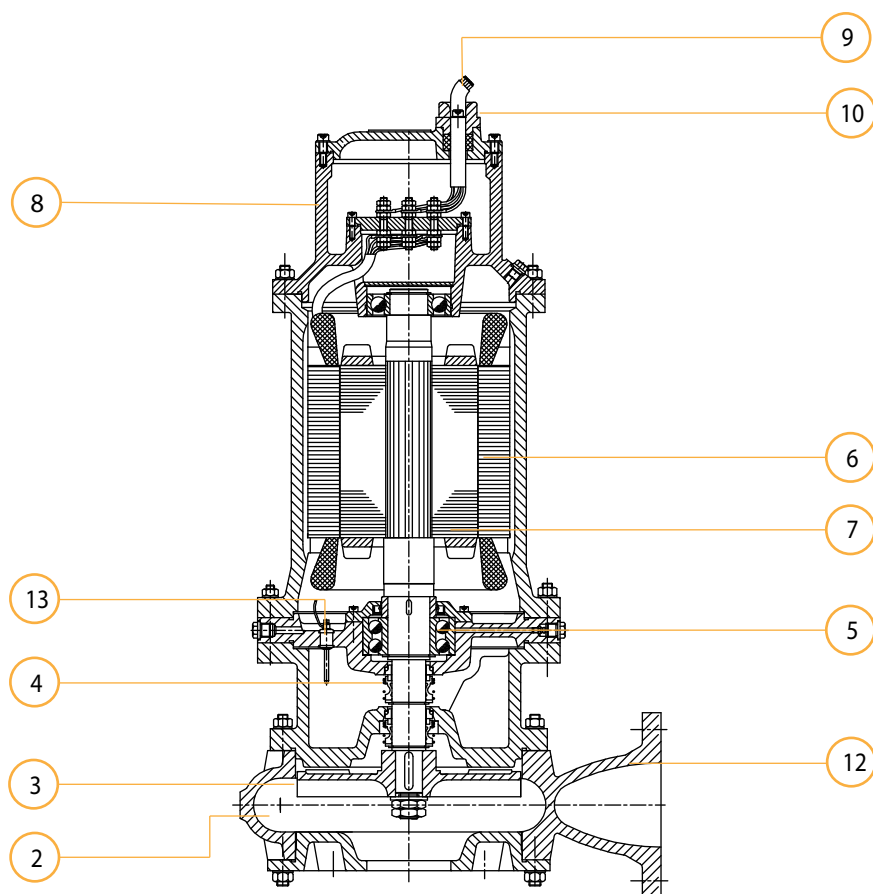

Part List

Volute	2
Impeller	3
Mechanical Seal	4
Bearing	5
Stator	6
Rotor	7
Top cover	8
Cable	9
Cable Socket	10
Service Hole	12
Sensor	13

